

WATERFILTER.DIRECT ULTRA-V-PRO3S



ULTRA-V-PRO3S
The next generation
in rainwater
filtration







✓ Shower Without
Harsh Chlorine

✓ Drinkable Water
From Every Faucet

✓ Cleaner
Plumbing

The Ultra-V-PRO3s is an advanced whole house water purification system. The unit delivers complete water treatment in 3 stages - filtration, UV disinfection and adsorption to remove sediment, bacteria and other pathogens while improving taste, clarity and odour.


Protects against

- | | | |
|---|--|---|
|  Bacteria |  Viruses |  Chemical Reduction - Chlorine taste and odour |
|  Sediment |  Cysts (Cryptosporidium, Giardia) |  Chemical reduction |

WATERFILTER.DIRECT

Protects against

- Removes pathogens including E. Coli, Cryptosporidium and Giardia when fitted with the Hydro-Flow Filter Kit, making it safe for drinking.
- Removes sediment and improves taste, colour and odour including a reduction of Chlorine, Chloramine, Fluoride, PFAS, PFOA, Pesticides, Nitrates, Lead, DBP-THM, Heavy metals, Carcinogens including anti-scale solutions for rainwater, bore water and town water.
- Corrosion-resistant stainless steel construction.
- Premium 20 x 4.5" filter housings.
- stainless steel components
- dual O-ring housing seals, Compression seals on inlet & outlet ports
- Pre-assembled for quick 'plug & play' installation.

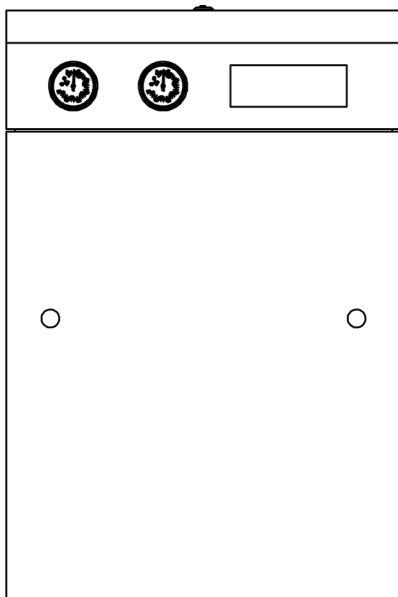

● Filter Cartridge Configuration

● First Stage - Multi Stage PP Grooved Sediment Filter

Removes common water impurities such as silt, dirt and rust.

● Second Stage UV Disinfection

UV Chemical-free process destroys bacteria and other harmful pathogens. No pathogen is known to be immune to UV disinfection giving you a 99.99% bacteria reduction. System comes with advanced 12 month monitoring system

● Third Stage - Advanced 5 stage carbon filter


Hydro-Flow advanced carbon filter reduces chemicals and contaminants including Chlorine, Fluoride, Heavy metals, Bacteria, Pesticides, DBP, PFAS - PFOA etc

Attention: System Must be installed by a Lic Plumber.

Use GENUINE replacement Water Filter Direct filter cartridges and components. Look for filter cartridge end cap watermark branding.



ATTENTION: Use only GENUINE light sources UV lamp, Quartz tube, UVC ballast and waterfilter.direct filter cartridge replacement components.

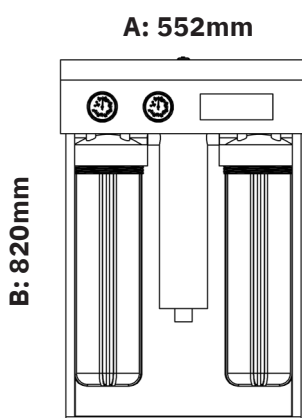

Models & Specifications

Model	Dimensions		UV Dose Flow Rates		
	A	B	30mj/cm ²	72mj/cm ²	90mj/cm ²
Ultra-V-PRO3s	552	820	90lpm	40lpm	30lpm

Model	Inlet	Outlet	1st Stage 5 micron se	2nd Stage	3rd Stage	UV Lamp	Maximum Pressure
Ultra-V-PRO3s	25 F/I	25 F/I	(20*4.5")	(20*4.5")	(20*4.5")	55w	10bar