

# waterfilter.direct VORTEX-F3

**NEW**  
VORTEX-F3



✓ Shower Without Harsh Chlorine



✓ Filtered Water From Every tap



✓ Longer lasting appliances



✓ No more dry skin

**Australia's most robust POE bracketed whole home filter—engineered with superior materials for unmatched durability and filter performance.**

The Vortex-F3, a robust stainless steel constructed whole house water filtration system. The unit delivers complete water treatment in multiple stages - filtration, adsorption down to 0.22 micron - to remove sediment, chemicals, bacteria and other pathogens while improving taste, clarity and odour.

## Protects against



Bacteria



Viruses



Chlorine taste and odour



Sediment



Cysts (Cryptosporidium, Giardia)



Chemical reduction

# VORTEX-F3

## Protects against

■ Removes pathogens including E. Coli, Cryptosporidium and Giardia when fitted with the Hydro-Flow Filter Kit, making it safe for drinking. ■ Removes sediment and improves taste, colour and odour of, Chlorine, Chloramine, Fluoride, PFAS, PFOA, Pesticides, Nitrates, Lead, DBP-THM, Heavy metals, Carcinogens including anti-scale solutions for rainwater, bore water and town water. ■ Corrosion-resistant stainless steel construction. ■ Premium Three 20 x 4.5" filter housings. ■ stainless steel components ■ dual O-ring housing seals, Compression seals on inlet & outlet ports ■ Pre-assembled for quick 'plug & play' installation.



### ● First Stage - Multi Stage Pleated Sediment Filtration

Multi Stage pleated sediment filter 5 micron, Removes common water impurities such as silt, dirt and rust, this cartridge offers 300% more surface area with 2 stages of filtrations

### ● Second Stage - Multi Stage GPSS Filter

Multi stage grooved 5 > 1 micron GPSS Filter offers 75% more surface area with 3 stages for filtration offering greater depth filtration increasing filter life and performance.

### ● Third Stage - Advanced Activated Coconut Carbon

Advanced Haycarb 0.5 micron activated coconut carbon filter reduces chemicals and contaminants including Chlorine, Heavy metals, Pesticides, DBP, PFAS - PFOA etc

### ● Other Filter Cartridge Options

Available in 9 different filter cartridge configurations

### Vortex-F3 Filter Cartridge Kit Options

STD Rainwater: 2045-SRFK

AB Rainwater: 2045-ABR-FK

Standard Mains/Town: 2045-VP-FK

Standard Mains-DC: 2045 DC-VP-FK

AB-Mains-DC: 2045-AB-DC-VP-FK

Anti-Scale: 2045-AS-VP-FK


Anti-Scale-DC: 2045-AS-DC-VP-FK

Advanced Filtration: 2045-HF-FK

Advanced Filtration-DC: 2045 HF-DC-FK

System Must be installed by a Lic Plumber.

**ATTENTION:** Use GENUINE replacement Water Filter Direct filter cartridges and components.

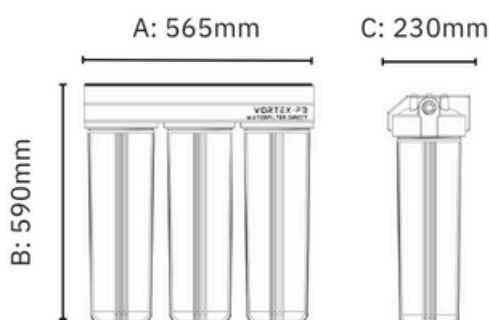

## Models & Specifications

Model	Dimensions			Inlet-Outlet	Seal	Warranty
	A	B	C	Brass	Compression	10 YEARS
Vortex-F3	565	590	230			

Model	Inlet	Outlet	1st Stage 5 micron se	2nd Stage	3rd Stage	Maximum Pressure
Vortex-F3	25mm F/I	25mm F/I	(20*4.5")	(20*4.5")	(20*4.5")	800kpa

Inlet Water Pressure: 175 > 800 kpa - AS = 500kpa

