

# waterfilter.direct VORTEX-PRO-III

**NEW**  
VORTEX-PRO-III



✓ Shower Without Harsh Chlorine



✓ Filtered Water From Every tap



✓ Longer lasting appliances



✓ No more dry skin

**Australia's most robust POE whole home filter system engineered with superior materials for unmatched durability and filter performance.**

The Vortex-Pro-III, Australia's most robust stainless steel constructed whole home water filtration system. The system delivers complete water treatment in multiple stages - filtration, adsorption down to 0.22 micron - to remove sediment, chemicals, bacteria and other pathogens while improving taste, clarity and odour. Backed by a 10 year warranty and lifetime support.

## Protects against



Bacteria



Viruses



Chlorine taste and odour



Sediment



Cysts (Cryptosporidium, Giardia)




Chemical reduction

# VORTEX-PRO-III

## Filter Performance

- Removes pathogens including E. Coli, Cryptosporidium and Giardia when fitted with the Hydro-Flow Filter Kit, making it safe for drinking.
- Removes sediment and improves taste, colour and odour including a reduction of Chlorine, Chloramine, Fluoride, PFAS, PFOA, Pesticides, Nitrates, Lead, DBP-THM, Heavy metals, Carcinogens including anti-scale solutions for rainwater, bore water and town water.
- Corrosion-resistant stainless steel construction.
- Premium Three 20 x 4.5" filter housings.
- stainless steel components
- dual O-ring housing seals, Compression seals on inlet & outlet ports
- Pre-assembled for quick 'plug & play' installation.

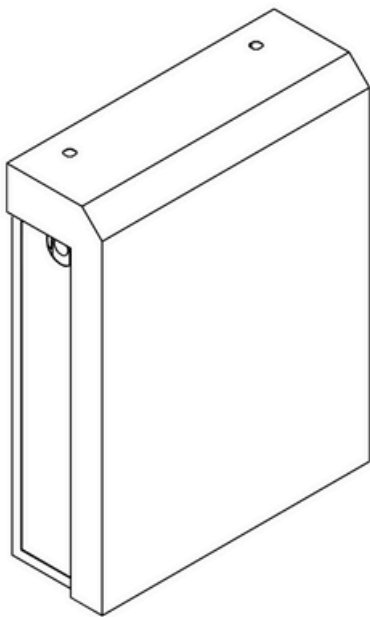


- **First Stage - Multi Stage Pleated Sediment Filtration**  
Multi Stage pleated sediment filter 5 micron, Removes common water impurities such as silt, dirt and rust, this cartridge offers 300% more surface area with 2 stages of filtrations
- **Second Stage - Multi Stage GPSS Filter**  
Multi stage grooved 5 > 1 micron GPSS Filter offers 75% more surface area with 3 stages for filtration offering greater depth filtration increasing filter life and performance.
- **Third Stage - Advanced Activated Coconut Carbon**  
Advanced Haycarb 0.5 micron activated coconut carbon filter reduces chemicals and contaminants including Chlorine, Heavy metals, Pesticides, DBP, PFAS - PFOA etc
- **Other Filter Cartridge Options**  
Available in 9 different filter cartridge configurations

### Vortex-F3 Filter Cartridge Kit Options

- STD Rainwater: 2045-SRFK
- AB Rainwater: 2045-ABR-FK
- Standard Mains/Town: 2045-VP-FK
- Standard Mains-DC: 2045 DC-VP-FK
- AB-Mains-DC: 2045-AB-DC-VP-FK
- Anti-Scale: 2045-AS-VP-FK
- Anti-Scale-DC: 2045-AS-DC-VP-FK
- Advanced Filtration: 2045-HF-FK
- Advanced Filtration-DC: 2045 HF-DC-FK

**Attention:** System Must be installed by a Lic Plumber.  
Use GENUINE replacement Water Filter Direct filter cartridges and components. Look for filter cartridge end cap watermark branding.

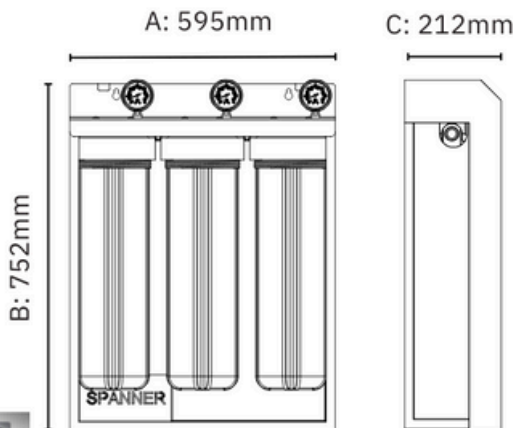

## Models & Specifications

| Model          | Dimensions |     |     | Inlet-Outlet |             | Seal     | Warranty        |
|----------------|------------|-----|-----|--------------|-------------|----------|-----------------|
|                | A          | B   | C   | Brass        | Compression | 10 YEARS | 1 P/L + 9 Parts |
| VORTEX-PRO-III | 595        | 752 | 212 | Lead free    | 25mm x 9mm  |          |                 |

| Model          | Inlet    | Outlet | 1st Stage<br>5 micron se | 2nd Stage | 3rd Stage | Maximum<br>pressure |
|----------------|----------|--------|--------------------------|-----------|-----------|---------------------|
| VORTEX-PRO-III | 25mm F/I | >>>>>> | (20*4.5")                | (20*4.5") | (20*4.5") | 800 kpa             |

